

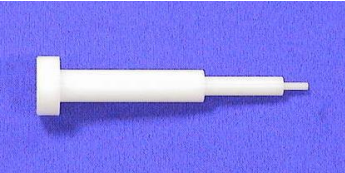

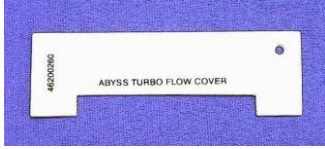




**SPECIAL TOOL KIT FOR REGULATOR/BCV**

Code 416903



<p>Tool, inflator release button</p>  <p>(C-1) Cod. 47106190</p>	<p>Demand lever adjusting tool</p>  <p>(B-20) Cod. 46106220</p>	
<p>1st stage disassembling tool</p>  <p>(B-5) Cod. 46106205</p>	<p>HP seat removal tool</p>  <p>(B-21) Cod. 46106221</p>	
<p>Demand lever assembling tool 2nd stage OR insert tool</p>  <p>(B-6) Codice 46106206</p>	<p>HP seat removal tool, piston 1st stage</p>  <p>(B-22) Cod. 46106222</p>	
<p>Tool to disassemble the HP 12S seat connector</p>  <p>(B-41) Cod. 46201041</p>	<p>Wrench, yoke retaining nut, 1° st. 25mm</p>  <p>(b-1) Cod. 46106201</p>	
<p>Demand lever adjusting tool B-12</p>  <p>(B-12) Cod. 46106212</p>	<p>Demand lever adjust. Gauge Akros/Nikos</p>  <p>Cod. 46106230</p>	
<p>Tool, LP inflator valve</p>  <p>(C2) Cod. 46200156</p>	<p>Demand lever adjust. Gauge Voltrex/Beta</p>  <p>Cod. 46106231</p>	
<p>Assembly tool, 2nd stage valve PROTON</p>  <p>(B-36) Cod. 46200383</p>	<p>Demand lever adust. Gauge, Abyss Turbo Flow</p>  <p>Code 46200260</p>	
<p>V42 valve seat disassemb. tool</p>  <p>(B-38) Cod.46200634</p>	<p>Tool to disassemble the HP seat connector</p>  <p>(B-42) Cod. 46201042</p>	<p>V42 valve seat assembling</p>  <p>(B-39) Cod.46200633</p>
<p>Special tool for Airtrim 2K3 dump valve seat</p>  <p>(C4) Cod.47200756</p>	<p>Disassembling tool, 1st stage piston 1° st. MR02</p>  <p>(B-11) Cod. 46106211</p>	<p>Special tool for Airtrim dump valves</p>  <p>(C3) Cod. 47200087</p>

**ADDITIONAL TOOL NOT INCLUDED**

<p>Demand lever adust. Air Control</p>  <p>Cod.46201073</p>	<p>Disassembling tool Air Control</p>  <p>(A-1) cod. 46201039</p>
--	--